

MINI CAM QUICK INSTALL GUIDE

MODEL 460668

ENGLISH
SLOVENČINA
HRVATSKI




MANHATTAN™

MAN-460668-QIG-ML2-0610-03-I

Thank you for purchasing the MANHATTAN® Mini Cam, Model 460668.

This guide presents the basic steps to set up and operate this device. For specifications and detailed instructions, refer to the user manual available at www.manhattan-products.com.

System Requirements

- IBM PC-compatible computer or notebook with USB port
- Pentium 200 or higher CPU
- Windows XP/Vista/7
- 20 MB of HDD space
- CD-ROM drive
- VGA display card for DirectX

Hardware

1. Connect the Mini Cam to a USB port on your computer.
2. Place the camera in a secure position/location while you proceed with the software installation and configuration.
3. Once you're able to view camera images on screen, rotate the focus ring as needed.



Software Installation

1. With the Mini Cam connected to your computer through a USB port, insert the included software CD in the CD-ROM drive. The installation procedure will run automatically and display a series of screens.
2. Follow the on-screen instructions for the InstallShield Wizard. **NOTE:** The steps and screen images for Windows XP vary slightly from those for Windows Vista and 7. Refer to the user manual as needed.
3. When finished with the InstallShield Wizard, go to Start on your desktop, then Programs. Select "Webcam/Webcam VideoCap" to display the initial menu screen.
4. Configure the camera as desired by selecting the numerous options and features in the File, Device, Option and Capture menus.

Ďakujeme vám za zakúpenie MANHATTAN® mini kamery, model 460668.

Tento sprievodca zobrazuje základné kroky potrebné pre nastavenie a prevádzku tohto zariadenia. Pre špecifikácie a detailné inštrukcie sa obráťte prosím na užívateľský manuál dostupný na stránke www.manhattan-products.com.

Systémové požiadavky

- IBM PC-kompatibilný počítač alebo notebook s USB portom
- Pentium 200 alebo vyššia CPU
- Windows XP/Vista/7
- 20 MB miesta na HDD
- CD-ROM mechanika
- VGA grafická karta pre DirectX

Hardvér

1. Pripojte mini kameru ku USB portu vášho počítača.
2. Umiestnite kameru na bezpečnú pozíciu / miesto, zatiaľ čo budete pokračovať s inštaláciou softvéru a nastavovaním.
3. Ako náhle budete môcť vidieť obraz kamery na obrazovke, podľa potreby pootočte zaostrovacím krúžkom.



Softvérová inštalácia

1. Ak máte mini kameru pripojenú ku vášmu počítaču cez USB port, vložte do CD-ROM mechaniky priložené CD so softvérom. Proces inštalácie sa spustí automaticky a zobrazí sa niekoľko obrazoviek.
2. Nasledujte inštrukcie na obrazovke Sprievodcu inštaláciou. **POZNÁMKA:** Snímky obrazoviek a niektoré kroky vo Windows XP sa môžu mierne líšiť od tých vo Windows Vista a 7. V prípade potreby sa obráťte na užívateľský manuál.
3. Po ukončení Sprievodcu inštaláciou prejdite na vašej pracovnej ploche do menu Štart a potom do Programy (Programs). Vyberte "Webkamera/Webkamera VideoCap" pre zobrazenie východzej obrazovky menu.
4. Nastavte kameru podľa vašich potrieb pomocou mnohých možností a funkcií v menu Súbor (File), Zariadenie (Device), Možnosti (Option) a Zachytenie (Capture).

Hvala što ste odabrali MANHATTAN® Mini kameru, model 460668.

Ove upute opisuju osnovne korake za instalaciju i upravljanje kamere. Za specifikacije i detaljnije instrukcije, pogledajte korisničke upute na www.manhattan-products.com.

Sistemska zahtjevi

- IBM PC-kompatibilno računalo ili laptop s USB portom
- Pentium 200 ili jači CPU
- Windows XP/Vista/7
- 20 MB od HDD prostora
- CD-ROM drive
- VGA grfička kartica za DirectX

Hardware

1. Spojite Mini kameru na USB port na računalo.
2. Namjestite kameru na sigurnu poziciju/lokaciju prije nego instalirate softver i konfiguraciju.
3. Kada se pojavi slika na ekranu, rotirajte okvir fokusa ako je potrebno.



Software instalacija

1. Kada ste Mini kameru spojili na računalo preko USB porta, ubacite softver koji se nalazi na CD-u u CD-ROM uređaj. Procedura instalacije će se pokrenuti automatski i prikazivati različite ekrane.
2. Pratite upute na ekranu preko InstallShield čarobnjaka. **NAPOMENA:** Koraci i slike na ekranu za Windows XP neznatno se razlikuju od Windows Vista i 7. Pogledajte u korisničkim uputama ako je potrebno.
3. Kada je završio InstallShield čarobnjak, idite na Start u alatnoj traci, i onda Programs. Odaberite "Webcam/Webcam VideoCap" za prikaz početnog ekrana.
4. Konfigurirajte kameru po želji odabirući razne opcije i mogućnosti u File, Device, Option i Capture menijima.

WASTE ELECTRICAL & ELECTRONIC EQUIPMENT

Disposal of Electric and Electronic Equipment

(applicable in the European Union and other European countries with separate collection systems)

ENGLISH

This symbol on the product or its packaging indicates that this product shall not be treated as household waste. Instead, it should be taken to an applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences to the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. If your equipment contains easily removable batteries or accumulators, dispose of these separately according to your local requirements. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, contact your local city office, your household waste disposal service or the shop where you purchased this product. *In countries outside of the EU:* If you wish to discard this product, contact your local authorities and ask for the correct manner of disposal.



SLOVENČINA

Tento symbol na produkte alebo jeho balení naznačuje, že sa s produktom nesmie zaobchádzať ako s domácim odpadom. Namiesto toho by malo byť zariadenie vzaté do zberného miesta pre recykláciu elektrických a elektronických zariadení. Zabezpečením správnej likvidácie napomáhate odstraňovať negatívne vplyvy na prostredie a ľudské zdravie, ktoré by mohli byť spôsobené nevhodnou likvidáciou tohto výrobku. Pokiaľ vaše zariadenie obsahuje jednoducho odnímateľné batérie alebo akumulátory, likvidujte ich oddelene podľa miestnych požiadaviek. Recykláciou materiálov pomôžete zachovávať prírodné zdroje. Pre podrobnejšie informácie o recyklácii tohto výrobku, kontaktujte príslušný miestny obecný úrad, podniky komunálnych služieb alebo obchod, v ktorom ste si zakúpili tento produkt. *V krajinách mimo EÚ:* Ak chcete odstrániť tento produkt, obráťte sa na príslušné miestne úrady a informujte sa o správnom spôsobe likvidácie.

HRVATSKI

Ovaj simbol na proizvodu ili pakiranju označava da se taj proizvod ne tretira kao kućni otpad. Nego bi trebao biti odnešen na posebno odlagalište za reciklažu električne i elektroničke opreme. Osiguravanjem da je oprema odložena ispravno, spriječiti ćete potencijalne posljedice na okolinu i ljudsko zdravlje, koje bi inače bilo ugroženo neadekvatnim odlaganjem otpada. Ako oprema sadrži odvojive baterije ili akumulatore, odvojite ih od uređaja prije odlaganja. Recikliranje materijala će pomoći pri zaštiti prirodnih resursa. Za više informacija o reciklaži ovog proizvoda, kontaktirajte lokalne vlasti, komunalna poduzeća ili trgovinu gdje ste kupili proizvod. *U zemljama izvan EU:* Ako želite odložiti ovaj proizvod, kontaktirajte lokalne vlasti i pitajte za ispravne mjere odlaganja.

FEDERAL COMMUNICATIONS COMMISSION REGULATORY STATEMENT

FCC Class B

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of Federal Communications Commission (FCC) Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy, and if not installed and used in accordance with the instructions may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from the receiver.
- Consult the dealer or an experienced radio/TV technician for help.

R&TTE

ENGLISH

This device complies with the requirements of the R&TTE Directive 1999/5/EC.

SLOVENČINA

Toto zariadenie vyhovuje požiadavkám Smernice R&TTE 1999/5/EC.

HRVATSKI

Ovaj uređaj zadovoljava zahtjeve R&TTE Directive 1999/5/EC.



WARRANTY INFORMATION

ENGLISH: For warranty information, go to www.manhattan-products.com/warranty.

SLOVENČINA: Pre informácie o záruke navštívte stránku www.manhattan-products.com/warranty.

HRVATSKI: Za informaciju o garanciji, posjetite www.manhattan-products.com/warranty.



MANHATTANTM

B R I N G I N G C O M P U T E R S T O L I F E

MANHATTAN® offers a complete line of PC Components,
Peripherals, Cables and Accessories. Ask your local computer dealer for more information
or visit www.manhattan-products.com.

All products mentioned are trademarks or registered trademarks of their respective owners.

MANHATTAN® ponúka kompletný rad PC komponentov, periférií, káblov a príslušenstva.
Pre viac informácií sa opýtajte svojho lokálneho predajcu počítačov alebo navštívte stránku
www.manhattan-products.com.

Všetky uvedené produkty sú ochrannými známkami alebo registrovanými ochrannými
známkami príslušných vlastníkov.

MANHATTAN® nudi kompletnu liniju PC komponentata, periferija, kablova i dodataka.
Pitajte vašeg lokalnog prodavača za više informacija ili posjetite
www.manhattan-products.com.

Svi navedeni proizvodi su zaštitni znaci ili registrirani zaštitni znaci njihovih vlasnika.